

Relative pressure transmitter
Operating instructions

Huba Control



Range of application for the pressure transmitter type 520

The pressure transmitter is used to measure relative pressure of liquid, gases and refrigerants (incl. ammonia).

Device design without explosion protection

The pressure transmitter consists of a piezoresistive stainless steel measuring cell with a diaphragm, installed in a stainless steel housing. The pressure measuring cell is fully welded. This transmitter is available with various connector types, IP protection standards as well as current- and voltage outputs.

Device design with explosion protection

The pressure transmitter consists of a piezoresistive stainless steel measuring cell with a diaphragm, installed in a stainless steel housing. The pressure measuring cell is fully welded. It can be electrically connected with a plug complying with EN 175301-803-A (IP65) or a round plug M12x1 (IP67). The output signal is 4 ... 20 mA.

Installation

- The location of the device has no influence on the precision of the measurement.
- Before installation, compare the process data with the data of the name plate.
- The medium being measured must be suitable for the parts of the pressure transmitter in contact with the medium.
- Connect the devices to a fixed cable installation.
- The devices may only be installed, connected, set-up and operated by qualified staff and in compliance with the technical specifications.
- The effects of UV radiation can cause materials to become brittle.
Protect the device from direct sunlight.

Grounding for devices

The pressure transmitter must be connected to the equipotential bonding system of the plant via the metal housing (process connection) or the ground conductor of the plug.


Safety instructions

In terms of a safety-instrumented system, this device left the factory in perfect condition. To maintain this status and to ensure safe operation of the device, observe the following notes:



The device may only be used for the purposes specified in these instructions.

- When connecting up, installing and operating the device, the directives and laws of your country apply.

- Devices with the type of protection "intrinsic safety" lose their approval, if they are operated on electrical circuits that do not conform to the test certification valid for your country.
- The device is not used properly, serious bodily injury and/or considerable damage to property cannot be excluded. This should be kept in mind particularly when the device was in use and is replaced.
- The installation, mounting and commissioning of the  devices should be performed only by trained personnel and should comply with the standard EN 60079-14.
- The transmitter is preset to the specific measuring range at the manufacturer's plant. An additional setting is not possible.
- The overload limit should be monitored and kept to at all times.
- The transmitter is maintenance-free.
- Connect the device to a low voltage power supply with safe separation (SELV).
- The device should only be supplied with limited energy according to UL 61010-1 Second Edition, Section 9.3 or LPS in conformance with UL 60950-1 or class 2 in compliance with UL 1310 or UL 1585.

Tests / Admissions


Electromagnetic compatibility:	CE conformity acc. EN 61326-2-3
Raised noise resistantcy:	EN 50121-3-2
Shock acc. IEC IEC 68-2-27:	100 g, 11 ms half sine wave, all 6 directions, free fall from 1 m on concrete (6x)
Constant shock acc. IEC 68-2-29:	40 g for 6 ms, 1000x all 3 directions
Vibration acc. IEC 68-2-6:	20 g, 15 ... 2000 Hz, 15 ... 25 Hz with amplitude ± 15 mm, 1 Octave/min. all 3 directions, 50 constant load
UL:	ANSI/UL 61010-1 acc. E325110
Drinking water approval:	NSF/ANSI 61/372 acc. MH60087
Protection against explosion:	Ex II 1/2 G Ex ia IIC T4 Ga/Gb Ex II 1/2 D Ex ia IIIC T125°C Da/Db
EC type examination certificate:	SEV 10 ATEX 0145

Electrical Connection

2 wire


3 wire

Connector DIN EN 175301-803-A or -C




1 (IN) 2 (OUT)

¹⁾ Not connected with transmitter housing




1 (IN) 2 (OUT) 3 (GND)

Swift connector

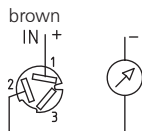

OUT green


1 (IN) 2 (OUT)

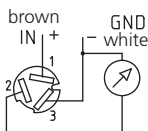


OUT green

1 (IN) 2 (OUT) 3 (GND)

Metri Pack Serie 150



B (IN) A (OUT)




B (IN) C (OUT) A (GND)


2 wire

3 wire


Connector M12x1




1 (IN) 3 (OUT)




1 (IN) 4 (OUT)

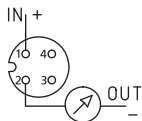


1 (IN) 2 (OUT)



1 (IN) 4 (OUT) 3 (GND)




1 (IN) 3 (OUT) 4 (GND)



1 (IN) 2 (OUT) 3 (GND)



Connector RAST 2.5



2 wire

3 wire

Braids




Device design with explosion protection: 4 ... 20 mA
The grounding connection is conductively connected to the transmitter housing.




Connector DIN
EN 175301-803-A (Ex)

Connector M12x1 (Ex)



1 (IN) 2 (OUT) ↓



1 (IN) 3 (OUT) 4 (↓)



Pressure transmitter type 520

Additional notes on installation

The following conditions relating must be met:

Operation is permitted only when connected to certified intrinsically-safe resistive circuits with the following maximum values:

$$U_i \leq 30 \text{ V}$$

$$I_i \leq 100 \text{ mA}$$

$$P_i \leq 750 \text{ mW}$$

internal inductance $L_i = 0 \text{ nH}$

internal capacitance $C_i = 0 \text{ nF}$

A maximum ambient air temperature of T_a -25 to +85 °C and maximum medium temperature of T_m -30 to +120 °C is permitted for the pressure transmitter.

Use as a resource belonging to category 1/2:

The pressure transmitters can be mounted in the wall separating the area with category 1 requirements (zone 0) and the area with category 2 requirements (zone 1). In this case, the process connection must be adequately sealed in compliance with IEC/EN 60079-26, clause 4.3, for example by providing degree of protection IP67 in compliance with EN 60529. The supply must be via intrinsically safe circuits with type of protection ia. The measuring cell may only be used for flammable materials to which the diaphragms of the measuring cells are adequately resistant both chemically and in terms of corrosion.

The date of manufacture can be seen on the label of the pressure transmitter, for example:

YYMMDD-XXX-XX-XXXX

Date as „year-month-day“ ⁽¹⁾

3 digits of the order number

Order position

Single part number

⁽¹⁾ YYMMDD - example 100912

Huba Control

Huba Control AG – Headquarters Schweiz

Industriestrasse 17, 5436 Würenlos

Telefon +41 (0) 56 436 82 00

Telefax +41 (0) 56 436 82 82

info.ch@hubacontrol.com

Huba Control AG – Niederlassung Deutschland

Schlattgrabenstrasse 24, 72141 Walddorfhäslach

Telefon +49 (0) 7127 23 93 00

Telefax +49 (0) 7127 23 93 20

info.de@hubacontrol.com

Huba Control SA – Succursale France

Rue Lavoisier, Technopôle Forbach-Sud

57602 Forbach Cedex

Téléphone +33 (0) 387 847 300

Télécopieur +33 (0) 387 847 301

info.fr@hubacontrol.com

Huba Control AG – Vestiging Nederland

Hamseweg 20A, 3828 AD Hoogland

Telefoon +31 (0) 33 433 03 66

Telefax +31 (0) 33 433 03 77

info.nl@hubacontrol.com

Huba Control AG – Branch Office United Kingdom

Unit 13 Berkshire House

County Park Business Centre

Shrivenham Road

Swindon - Wiltshire SN1 2NR

Phone +44 (0) 1993 776667

Fax +44 (0) 1993 776671

info.uk@hubacontrol.com